
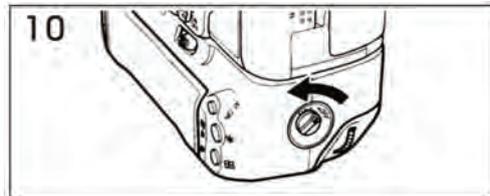
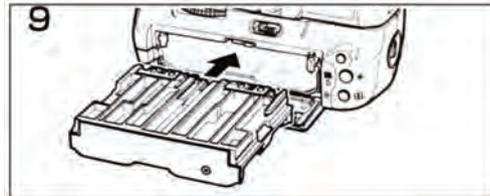
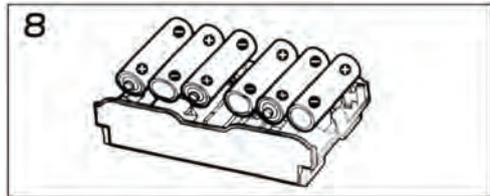
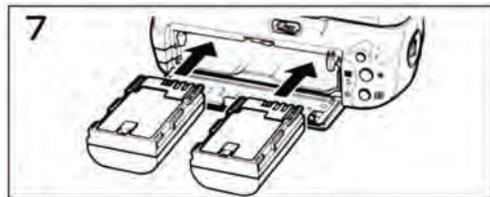
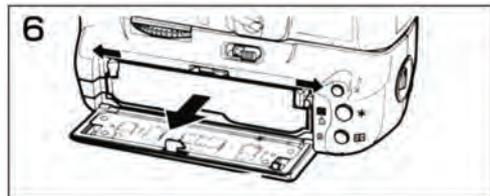
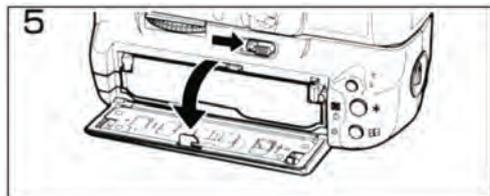
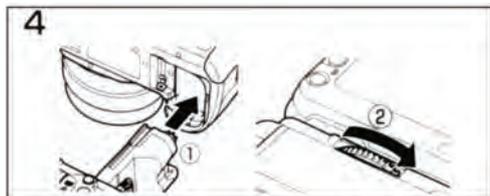
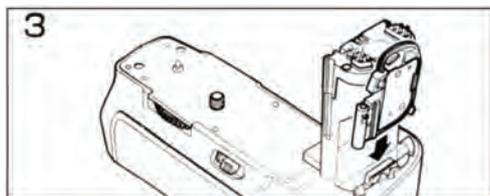
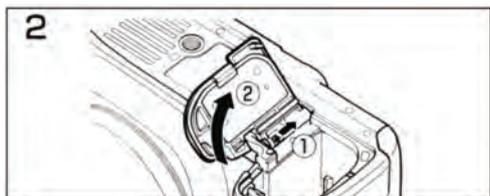
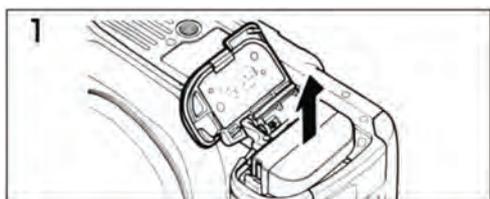


Multi-power Battery Pack

designed for
Canon

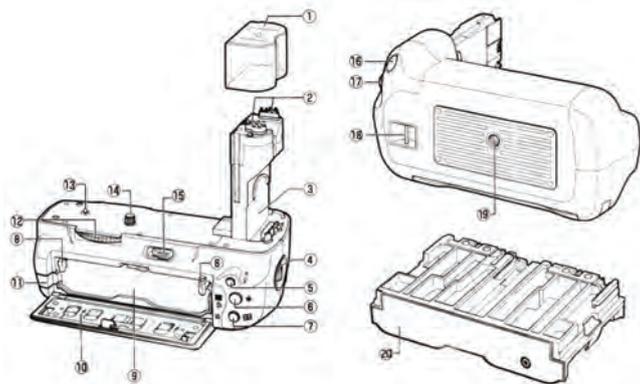

INSTRUCTIONS

Thank you for purchasing Xit Product.

The XTCG5DIII is a battery grip that can hold two Battery Packs LP-E6 or six size-AA/LR6 batteries. It is also equipped with a vertical-grip shutter button, Main Dial, etc. to enable shooting in the same way as a horizontal grip.

ATTACHING TO THE CAMERA

1. Remove the battery from the camera (Fig. 1).
2. Detach the camera's battery compartment cover
3. Insert the detached cover into its storage slot to ensure that it will not be lost (Fig. 3).
4. Remove the protective cover, and then insert the electrical contacts into the battery compartment (Fin. 4-1).
5. Align the attachment screw with the camera's tripod socket, and then turn the attach/detach knob to tighten securely to the camera (Fig. 4-2)

- Be sure to attach the battery grip to the camera before inserting the batteries. The results of the battery check may not be displayed properly if you attach the battery grip to the camera with the batteries already inside.
- Before removing the battery grip from the camera, be sure to turn the camera's power switch to <OFF>, and take out the batteries. After removing the batteries, attach the protective cover to the electrical contacts.

INSERTING THE BATTERY PACKS

1. Slide the lever as shown by the arrow and open the cover (Fig. 5)
2. Press both release levers outward in the battery compartment, and remove the battery magazine (Fig. 6).
3. Insert one or two Battery Packs LP-E6 in the orientation shown on the battery compartment cover (Fig. 7).
4. Close the battery compartment cover until it clicks into place.

- If only one battery pack is used, it may be inserted in either the right or left sides.
- If two battery packs are inserted, power is supplied simultaneously by both battery packs. Two battery packs with different charging levels can be inserted and used without any problems.
- Remove the battery packs from the battery grip when the camera will not be used for an extended period.

INSERTING SIZE-AA/LR6 BATTERIES

1. Insert the batteries into the Battery Magazine XTCG5DIII (Fig. 8). Make sure the + and - battery contacts are properly oriented as shown in the illustration.
2. Turn over the battery magazine so that the inserted batteries are facing downward, and then insert the battery magazine until the release lever locks into place (Fig. 9).
3. Close the battery compartment cover until it clicks into place.

- Fewer images can be shot when using size-AA/LR6 batteries. Also, fewer images can be shot depending on the battery brand and storage conditions, and so usage of size-AA/LR6 batteries is recommended only for emergencies.
- With size-AA/LR6 batteries, use six new batteries of the same brand at temperatures above 20°C/68°F. The camera may not function when used in low temperatures or old and new batteries are used together.

USING THE BATTERY GRIP

- Turning the vertical-grip operation switch to <ON> (Fig. 10) makes the battery grip buttons and dial function in the same way as those on the camera.
- When shooting in the horizontal-grip position, turn the vertical-grip operation switch to <OFF> so that you do not accidentally use the buttons or dial on the battery grip.

BATTERY LIFE

Temperature: +23°C / 0°C 73°F / 32°F [Number of shots - approx.]

Model	Shooting method	Power supply	Possible shots
EOS 5D Mark III	Viewfinder shooting	LP-E6 x 2	1700/1500
		AA alkaline/LR6 batteries	300/100
	Live View shooting	LP-E6 x 2	400/360

- Based on CIPA (Camera & Imaging Products Association) testing standards, the number of images that can be shot is reduced by holding the shutter button halfway down for an extended time, and using the AF frequently without shooting.
- The number of images that can be shot is reduced by frequent usage of the LCD monitor.
- The battery level can be checked on the LCD panel of the camera and in the viewfinder.

SPECIFICATIONS

Type:	Battery grip for the EOS 5D Mark III
Power sources:	(1) One or two Battery Packs LP-E6 (2) AA alkaline/LR6 batteries x 6
Power switch:	Camera's power switch
Working temperature range:	0°C - +40°C / 32°F - 104°F
Working humidity:	85% or less
Dimensions:	149.1 (W) x 114.3 (H) x 76.3 (D) mm/ 5.9 (W) x 4.5 (H) x 3.0 (D) in.
Weight:	Approx. 315 g / 11.1 oz. (not including the power supply or battery magazine)

PART NAMES

- | | |
|---|-------------------------------------|
| ① Protective cover | ⑩ Battery compartment cover |
| ② Electrical contacts | ⑪ DC coupler cord mount |
| ③ Camera battery compartment cover slot | ⑫ Attach/detach knob |
| ④ Vertical-grip operation switch | ⑬ Guide pin |
| ⑤ Vertical-grip AE start button | ⑭ Attachment screw |
| ⑥ Vertical-grip AE lock/FE lock/Index reduce button | ⑮ Battery compartment release lever |
| ⑦ Vertical-grip AF point selection/Magnify button | ⑯ Vertical-grip shutter button |
| ⑧ Battery release lever | ⑰ Vertical-grip Main Dial |
| ⑨ Battery compartment | ⑱ Hand strap mount |
| | ⑲ Tripod socket |
| | ⑳ Battery magazine XTCG5DIII |