



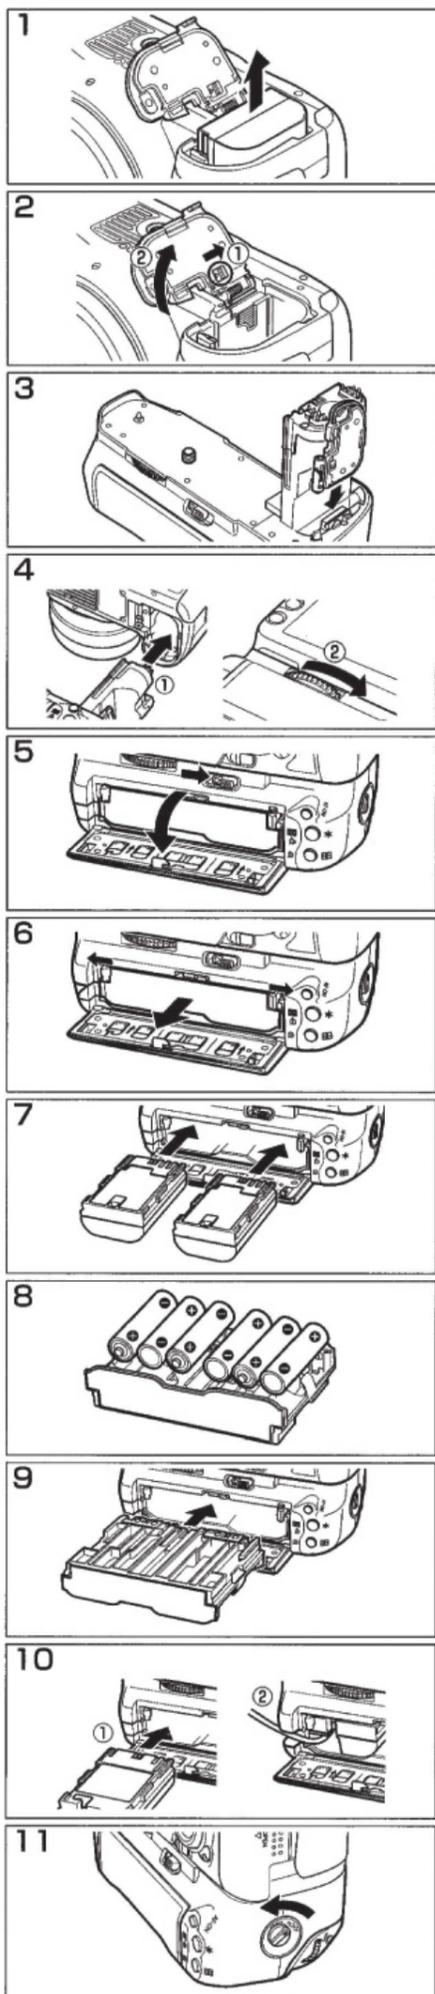

Multi-power Battery Pack

designed for

Canon

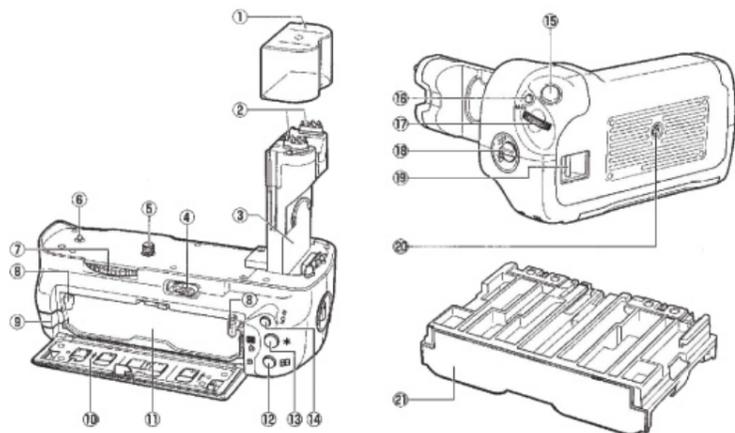

PART NAMES

- | | |
|------------------------------------------|-----------------------------------------|
| 1. Protective cover | 12. AF point selection / Magnify button |
| 2. Electrical contacts | 13. AE lock / index / reduce button |
| 3. Camera battery compartment cover slot | 14. AF start button |
| 4. Battery compartment release lever | 15. Shutter button |
| 5. Attachment screw | 16. Multi-function button |
| 6. Guide pin | 17. Main dial |
| 7. Attach / detach knob | 18. Vertical-grip operation switch |
| 8. Battery release lever | 19. Hand strap mount |
| 9. DC coupler cord mount | 20. Tripod socket |
| 10. Battery compartment cover | 21. Battery magazine |

Thank you for purchasing Xit product. The XTCG7D is a battery grip that can hold two battery packs LP-E6 or six size-AA batteries. It is also equipped with a vertical grip shutter button, Main dial etc to enable vertical shooting with the same ease as horizontal shooting.

ATTACHING TO THE CAMERA

1. Remove the battery from the camera (fig. 1)
2. Detach the camera's battery compartment cover (fig. 2)
3. Insert the detached cover into its storage slot to ensure that it will not be lost (fig. 3)
4. Remove the protective cover, and then insert the electrical contact into the battery compartment (fig. 4-1)
5. Align the attachment screw with the camera's tripod socket, then turn the attach/detach knob to tighten securely to the camera (fig. 4-2)

- Be sure to attach the battery grip to the camera before inserting the batteries. The results of the battery check may not be displayed properly if you attach the battery grip to the camera with the batteries already inside.
- Before removing the battery grip from the camera, be sure to turn the camera's power switch to <OFF>, and take out the batteries. After removing the batteries, attach the protective cover to the electrical contacts.

INSERTING THE BATTERY PACKS

1. Slide the lever as shown by the arrow and open the cover (fig. 5)
2. Press both release levers outward in the battery compartment and remove the battery magazine (fig. 6)
3. Insert one or two battery packs LP-E6 in the orientation shown on the battery compartment cover (fig. 7)
4. Close the battery compartment cover until it clicks into place.

- If only one battery pack is used, it may be inserted in either the right or left sides.
- If two battery packs are inserted, power is supplied simultaneously by both battery packs, two battery packs with difference charging levels can be inserted and used without any problems.
- Remove the battery packs from the battery grip when the camera will not be used for an extended period.

INSERTING SIZE-AA BATTERIES

1. Insert the batteries into the battery magazine (fig. 8). Make sure the + and - battery contacts are properly oriented as shown in the illustration.
2. Turn over the battery magazine so that the inserted batteries are facing downwards, and then insert the battery magazine until the release levers locks into place (fig.9)
3. Close the battery compartment cover until it clicks into place.

- Fewer images can be shot when using the size-AA batteries. Also, fewer images can be shot depending on the battery brand and storage conditions, and so usage of size-AA batteries is recommended only for emergencies.
- With size-AA batteries, use six new batteries of the same brand at temperature above 20°C/68°F. The camera may not function when used in low temperatures or when old and new batteries are used together.

USING A HOUSEHOLD POWER OUTLET

1. Connect the DC coupler plug to the AC adapter. Connect the power cord to the AC adapter, and insert the prongs into a power outlet.
2. Load the DC coupler into the left side of the battery compartment (fig. 10-1), and pass the cord through the cord mount. (fig. 10-2)

- Do not connect or disconnect the power cord while the camera's power switch is set to <SET>

USING THE BATTERY GRIP

1. Turning the vertical grip operation switch to <ON> (fig. 11) makes the battery grip buttons and dial function in the same way as those on the camera.
2. When shooting horizontally, turn the vertical grip operation switch to <OFF> so that you do not accidentally use the buttons or dial on the battery grip.
3. The battery level can be checked on the LCD panel of the camera and in the viewfinder.

SPECIFICATIONS

- | | |
|----------------------------|--------------------------------------------------------------------------|
| Power sources: | 1. One or two battery packs LP-E6 (not included) |
| | 2. AA alkaline batteries x 6 (not included) |
| | 3. AC adapter (not included) |
| Power switch: | Camera's power switch |
| Possible shots: | Refer to your camera's instruction manual |
| Working temperature range: | 0°C+40°C/32°C-104°F |
| Working humidity: | 85% or less |
| Dimensions: | 147.4 (W) x 114.3 (H) x 76.9 (D) mm
5.8 (W) x 4.5(H) x 3.0 (D) in. |
| Weight: | Approx. 340g/12.0oz (not including the power supply or battery magazine) |