


Multi-power Battery Pack

designed for
Canon

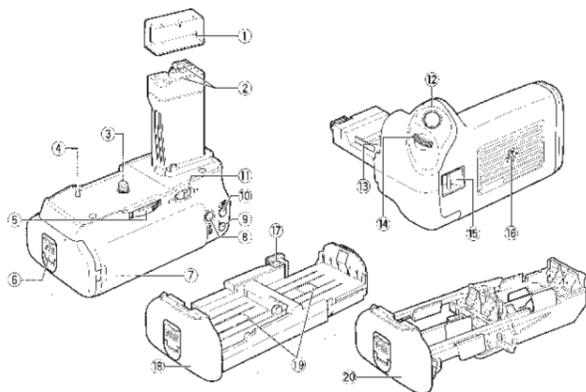

PARTS NAME

- ① Protective cover
- ② Electrical contacts
- ③ Attachment screw
- ④ Guide pin
- ⑤ Attach/detach knob
- ⑥ Battery magazine release handle
- ⑦ DC cord mount
- ⑧ Aperture/exposure compensation button
- ⑨ AF point selection/Magnify button
- ⑩ AE lock/FE lock/Index/Reduce button
- ⑪ Vertical-grip operation switch
- ⑫ Shutter button
- ⑬ Camera battery compartment cover slot
- ⑭ Main Dial
- ⑮ Hand strap mount
- ⑯ Tripod socket
- ⑰ Battery magazine protective cover
- ⑱ Battery magazine
- ⑲ Battery pack compartment
- ⑳ Battery magazine (For size-AA batteries)

INSTRUCTIONS

The XTCGT3i is a battery grip that can hold two Battery Pack LP-E8 or six size-AA batteries. It is also equipped with a vertical-grip shutter button, Main Dial, etc. to enable shooting in the same way as with horizontal grip.

ATTACHING TO THE CAMERA

1. Remove the battery from the camera. (Fig. 1)
2. Pull out the camera's battery compartment cover at a slanted angle to detach. (Fig. 2)
3. Insert the detached cover into its storage slot to ensure that it will not be lost. (Fig. 3)
4. Remove the protective cover, and then insert the electrical contacts into the camera battery compartment. (Fig. 4-1)
5. Align the attachment screw with the camera's tripod socket, and then turn the attach/detach knob to tighten securely. (Fig. 4-2)

- ⓘ Do not further push open the battery compartment cover when it is already open. Doing so may damage its hinge.
- Be sure to attach the battery grip to the camera before inserting the batteries. The results of the battery check may not be displayed properly if you attach the battery grip to the camera with the batteries already inside.
- Before removing the battery grip from the camera, be sure to turn the camera's power switch to <OFF>, and take out the batteries. After removing the batteries, attach the protective cover to the electrical contacts.

INSTALLING THE BATTERY PACKS

1. After flipping out the release handle, turn it as shown by the arrow, and then pull out the battery magazine (for size-AA batteries). (Fig. 5)
2. Insert one or two Battery Pack LP-E8 into the battery magazine for LP-E8. (Fig. 6)
3. Remove the protective cover of the battery magazine, and then attach it into the battery grip. (Fig. 7-1)
- After attaching, check that the battery magazine is securely attached to the battery grip.
4. Close the release handle. (Fig. 7-2)

- ⓘ If only one battery pack is used, it may be inserted in either the right or left side.
- If two battery packs are inserted, power is supplied simultaneously by both battery packs. Two battery packs with different charging levels can be inserted and used without any problems.
- Remove the battery packs or size-AA batteries from the battery grip when the camera will not be used for an extended period.

INSERTING SIZE-AA BATTERIES

1. Insert the batteries into the battery magazine (for size-AA batteries) (Fig.8) Make sure the + and - battery contacts are properly oriented as shown in the illustration.
2. Attach the battery magazine into the battery grip. (Fig. 9-1)
- After attaching, check that the battery magazine is securely attached to the battery grip.
3. Close the release handle. (Fig. 9-2)

- ⓘ Fewer images can be shot when using size-AA batteries. Also, the number of possible shots may vary depending on the batteries brand and storage conditions, so usage of size-AA batteries is recommended only for emergencies.

With size-AA batteries, use six new batteries of the same brand at temperatures above 20°C/68°F. The camera may not function when used in low temperatures or when old and new batteries are used together.

USING A HOUSEHOLD POWER OUTLET

To connect to a household power outlet, use the AC Adapter Kit (sold separately).

1. Connect the power cord to the AC adapter, and insert the prongs into a power outlet. Connect the DC cord to the DC coupler.
2. Insert the DC coupler into the release-handle-side battery pack compartment of the battery magazine (for LP-E8), and then attach to the battery grip. Pass the DC cord through the DC cord groove. (Fig. 10)

- ⓘ Always set the camera's power switch to <OFF> before disconnecting the power cord.
- Be careful that the DC cord does not get pinched between the battery grip and the battery magazine.

USING THE BATTERY GRIP

Turning the vertical-grip operation switch to <ON> (Fig. 11) makes the battery grip buttons and dial function in the same way as those on the camera.

When shooting in the horizontal-grip position, turn the vertical-grip operation switch to <OFF> so that you do not accidentally use the buttons or dial on the battery grip.

Hand Strap (sold separately) can be used for enabling a more secure grip.

The battery level can be checked on the camera.

SPECIFICATIONS

Battery:	(1) One or two Battery Packs LP-E8 (2) Six Size-AA Alkaline batteries (3) AC Adapter Kit
Power switch:	Camera's power switch
Possible shots:	Refer to your camera's Instruction Manual.
Working temperature range:	0°C - +40°C / 32°F - 104°F
Working humidity:	85% or less
Dimensions:	131.8 (W) x 108 (H) x 79.9 (D) mm/ 5.2 (W) x 4.3 (H) x 3.1 (D) in.
Weight:	Approx. 230 g/8.1 oz. (without batteries and battery magazine)

